DishHDTVChina.com

DISH HD Quick Start Guide

Press this button for SAT Mode

Input
Press once for Input.
Press and hold for Recover

DishHD STB Menu
Accesses features and settings

Volume and Mute Buttons
Controls TV volume
Programming required

Themes
Searches for programs using Themes

Recall
Returns to the last channel viewed

Info
Retrieves information on programs

Digital Video Recorder (DVR) Buttons
Pauses live TV and play or record programming (Feature may not be available depending on your STB)

Format
Formats the picture to the desired width to match the program you are viewing

DishHD 211t Power
Turns the DishHD 211t on/off

TV Power
Turns the TV on/off Programming required

Page Buttons
Pages up/down in menus

Program Guide
Displays current and future satellite program listings

Browse
Views what is on other channels while watching TV

Arrows/Select Buttons
Channels up/down, navigates through menus, and selects a desired option

View Live TV
(Satellite Programming)
Exits from of any menu/guide and returns to viewing your satellite programming

Number Buttons
Enters a channel number, or navigates through menus

Alt Audio
Changes to another available language (audio stream), where supported

Easy Ways to Find a Program

GUIDE

Select a program from the Program Guide
TIP: Press the GUIDE button once to open the Program Guide or repeatedly to change among your Favorites Lists.

Channel Up/Down one program at a time

Enter a channel number

Tip: To skip ahead 24 hours in the Program Guide, press the SKIP FWD button. To back up 24 hours, press the SKIP BACK button.

Tip: While viewing a program, press the BROWSE (RIGHT ARROW) button. Then press either the UP or DOWN ARROW. The information on other channels appears in the Browse Banner. Press SELECT to watch the program.

Formatting Your TV Screen

FORMAT

Press the FORMAT button on your remote to change your picture's sizing to your preference. See your HDTV user's guide for formatting options available on your HDTV.

Watching Your Satellite Programming

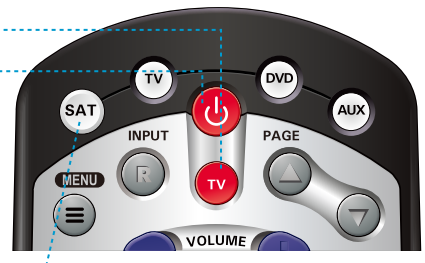

SAT — You must be in SAT mode to operate your DishHD STB. Press the SAT button to enter SAT mode

Turns the DishHD STB On or Off

TV — Turns the TV On or Off

DISH HD Quick Start Guide

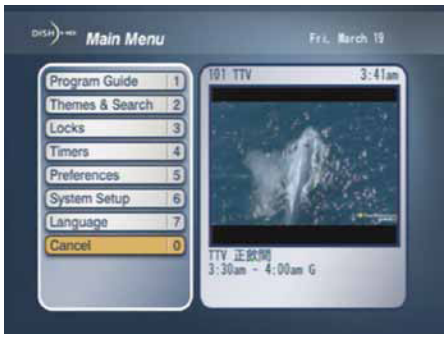

Main Menu without External Hard ain Me h Drive attached.

Use the INPUT button to return to watching satellite programming if you accidentally change channels or inputs on your TV

1

INPUT

Press and hold INPUT until all mode buttons light up.

2

If you see the System Info screen, proceed to step 4. Otherwise, continue to step 3.

3

INPUT

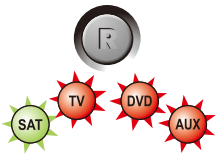

Press INPUT again and wait until the Mode lights stop lashing. If you see the System Info screen, go to step 4. If not, press INPUT again.

4

Press SELECT to end the procedure and return to satellite programming.

Main Menu with External Hard Drive attached.

Programming Limited Mode

Limited Mode locks out all TV mode operations except TV power, Mute, and Volume, preventing you from accidentally tuning away from satellite programming.

To undo, repeat using the PAGE DOWN button instead of PAGE UP.

1

Press and hold the TV Mode button until all Mode buttons light up.

2

PAGE

Press the PAGE UP button.

3

Press POUND.

GUIDE

Highlight a future program in the Guide, press the SELECT button, and choose your recording options from the menu.

Digital Video Recorder (DVR) Functions

Go to list of recorded programs

Skip back 10 seconds

Reverse at 4 different speeds

Stop playback or recording

Pause live TV or recorded program

Skip forward 30 seconds

Fast forward at 4 different speeds

Starts playback

Record a program

Tip: To record a program that is currently playing, press the RECORD button and follow the on-screen instructions.

Tip: Press the DVR button twice to quickly access your recorded programs.

Tip: To quickly access your DVR timer schedule, press the DVR button three times.

Tip: The DVR still records your programs when the DishHD STB is powered off.